


Functions

Funciones

Funzioni

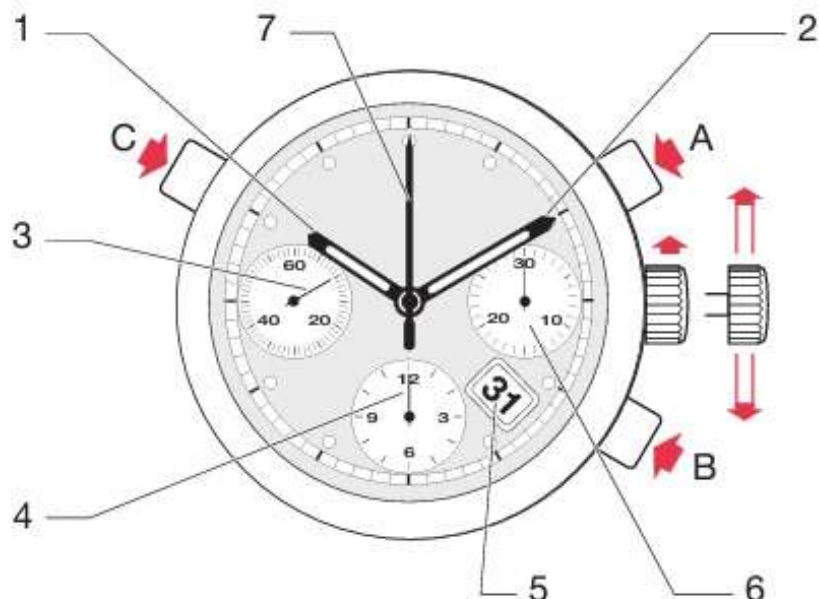

Pusher A: Start / Stop chrono

Pusher B: Reset chrono

Pusher C: Correction of the date

1. Hour hand
2. Minute hand
3. Second hand
4. 12 hours counter
5. Date indicator
6. 30 minute counter
7. 60 second counter

Restrictions

Rapid date correction is not possible between 8.30 p.m. and 11 p.m.

Correction is possible by turning the hour hand back and forth between 8 p.m. and 12 o'clock midnight.

Pulsador A: Inicio / parada crono

Pulsador B: Puesta a cero crono

Pulsador C: Corrección de la fecha

1. Aguja de las horas
2. Aguja de los minutos
3. Aguja de los segundos
4. Contador de 12 horas
5. Indicador del día
6. Contador de 30 minutos
7. Contador de los segundos

Restricciones

No es posible efectuar la corrección rápida de la fecha entre las 20.30 h y las 23 h.

Se puede realizar la corrección girando hacia adelante y hacia atrás la aguja de las horas entre las 20 h y las 24 h.

Pulsante A: Avvio / Arresto cronografo

Pulsante B: Rimessa a zero cronografo

Pulsante C: Correzione della data

1. Lancetta delle ore
2. Lancetta dei minuti
3. Lancetta dei secondi
4. Contatore delle 12 ore
5. Indicatore dei giorni
6. Contatore dei 30 minuti
7. Contatore dei 60 secondi

Restrizioni

Non è possibile eseguire la correzione rapida della data tra le 20.30 e le 23.

La correzione è invece possibile facendo andare e venire la lancetta delle ore tra le 20 e le 24.