
Steel bracelet *sizing*

BRELLUM STEEL BRACELET · REF. BO.02 · ADJUSTING THE BRACELET LENGTH

A TOOLS

Supplied with the bracelet

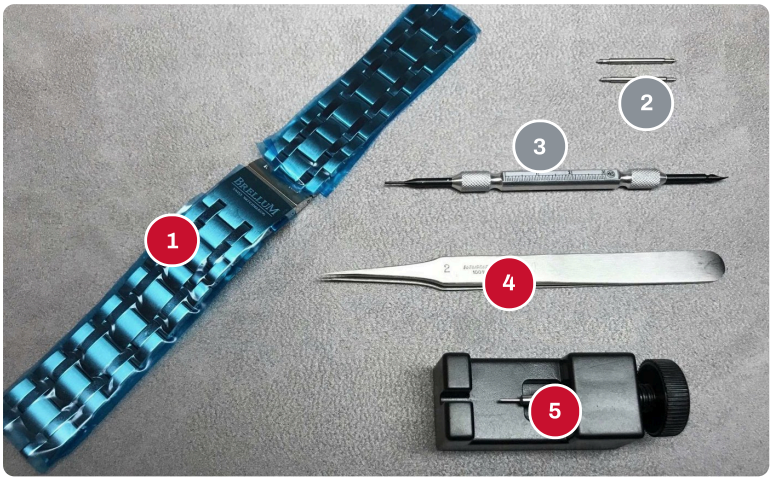

1. Bracelet, protective films in place
2. Spring bars (2)
3. Fitting tool (spring bar tool)
4. Tweezers
5. Bracelet holder

For sizing: 1, 4 and 5.


B BEFORE YOU START

A few precautions

- Work in good light.
- Keep the protective films on the bracelet throughout.
- Protect your work surface with a soft cloth.
- Take your time: no step needs force.
- If you cannot do it, a watchmaker will do it in a few minutes.

C PRINCIPLE


Links, pins and tubes

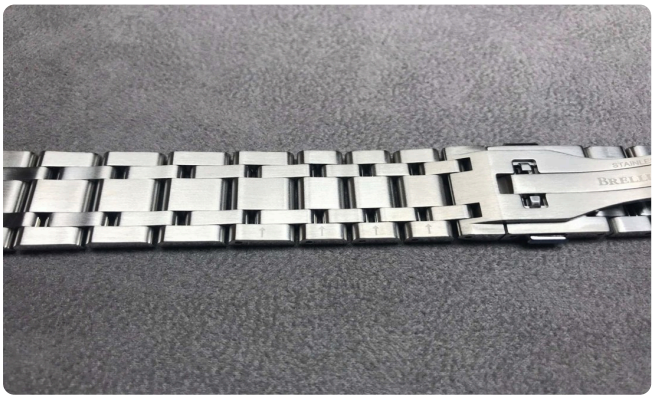


- The links are joined by a pin and a small tube.
- The bracelet has removable links and half links for fine adjustment.
- Arrows on the back of the bracelet show the direction to push the pin out. It goes back in the opposite direction.

D REMOVING A LINK


With the bracelet holder

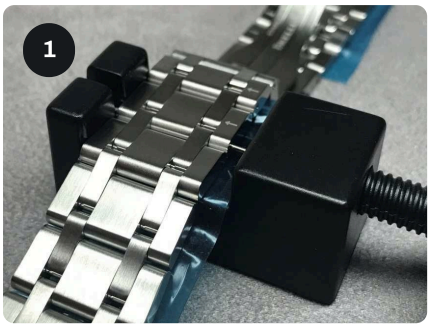

Unscrew the large screw of the holder and place the bracelet on it, the pin facing the point, arrows in the pushing direction.

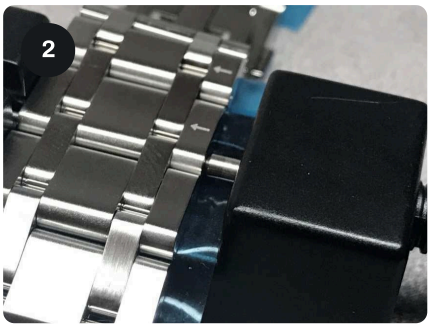


Screw until it touches, then a little more: a small click, the pin comes out.

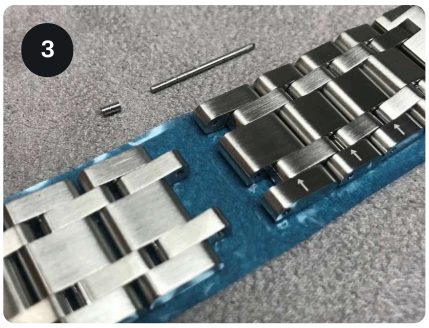

With the tweezers, remove the pin and the small tube inside the link.

E CLOSING THE BRACELET


Tube first, then pin

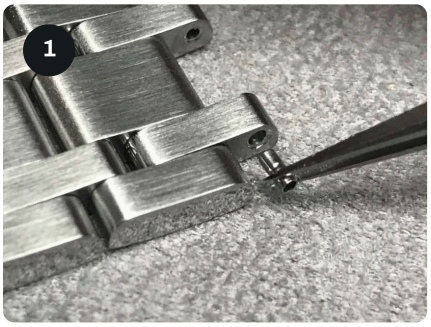

With the tweezers, put the small tube back into the link, well centred.




Insert the pin, the end with the small notch first.

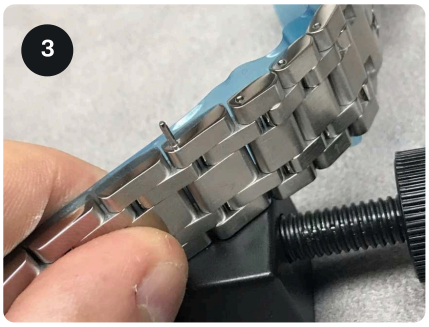

Push it in with your fingers as far as possible, moving the links slightly.



Lay the bracelet on the flat part of the holder and push the pin with the flat back of the tweezers until it is flush.

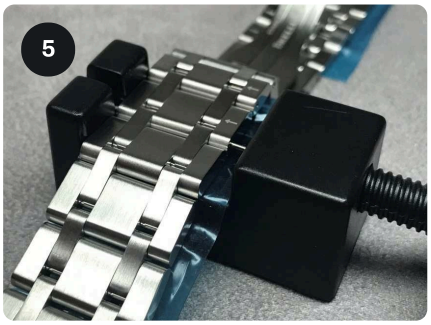

On the holder, centre the pin in the link.

A question or need help? Write to us: customer@brellum.swiss