
Bicompax *column-wheel* chronograph

AUTOMATIC MOVEMENT · BRELLUM CALIBRE BR-111 · LA JOUX-PERRET BASE


A DISPLAY

Hands and indications

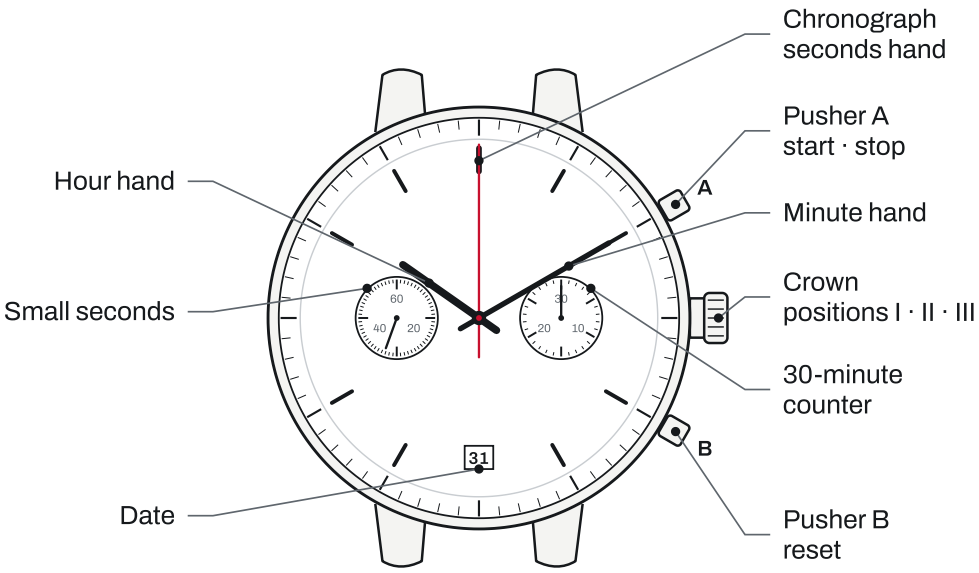

B SETTINGS

Three-position crown

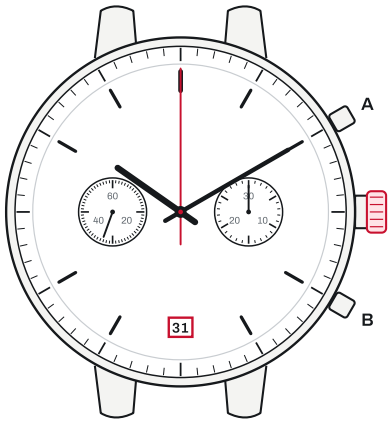

I — Running and manual winding

Normal position. Turn the crown upwards to wind the watch by hand. On the wrist, the movement winds itself.

II — Quick date setting

Turn the crown to advance the date to the day you want.

III — Time setting

The seconds hand stops so you can set the time to the second. The date changes when the hands pass midnight: to be sure of morning or evening, move them until the date changes, then set the time.


Never correct the date between 10 p.m. and 4 a.m.

The date mechanism is then engaged: a correction can damage it. First move the hands outside this period (position III), then set the date (position II).

C CHRONOGRAPH

Single timing

1	A	**Start**
2	A	**Stop** · read the measured time
3	B	**Reset**

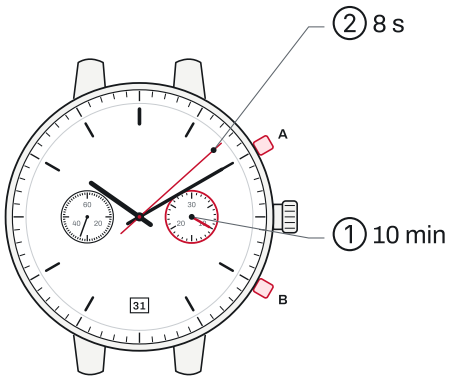

CROWN IN POSITION I.

READING THE MEASURED TIME

The chronograph measures up to 30 minutes, on two indicators. Read them in this order:

Measured time: 10 min 8 s

The large red hand counts the chronograph seconds. The small seconds at 9 o'clock only show that the watch is running.

D CHRONOGRAPH

Add function

Add up several times without resetting, for example the legs of a journey.

1	A	**Start**
2	A	**Stop** · read
3	A	**Restart**
4	A	**Stop** · read the total time
5	A	**Restart**
6	A	**Stop** · read the total time
X	B	**Reset** · only after a stop

WINDING

Worn every day, the watch winds itself. After a few days off the wrist, give it 20 to 30 turns of the crown in position I.

WATER

Never operate the pushers or the crown under water, and always push the crown back to position I.


SERVICE

A question, an adjustment, a service? Write to us: customer@brellum.swiss

E SCALES

Depending on the model

Depending on the model, your watch carries one or more of these scales, on the dial or on the bezel. They are read with the chronograph seconds hand, crown in position I.

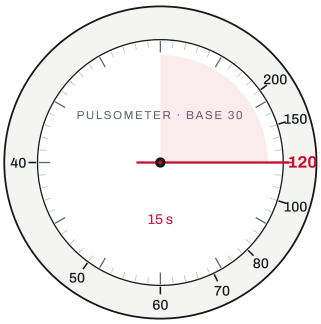


Pulsometer

Measures the heart rate in beats per minute.

1. A **Start** · when you begin counting the pulse
2. **Count 30 beats**
3. A **Stop** · exactly on the 30th beat
4. **Read the rate** · on the scale, opposite the seconds hand

30 beats in 15 seconds: the hand shows **120 beats per minute**.

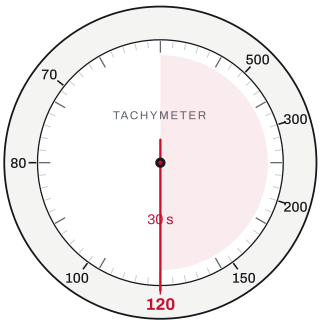


Tachymeter

Measures an average speed over a known distance, or a production rate.

1. A **Start** · at the beginning of the measurement
2. A **Stop** · after exactly one kilometre, or the unit of the scale
3. **Read the speed** · on the scale, opposite the seconds hand

One kilometre covered in 30 seconds: the scale shows **120 km/h**.

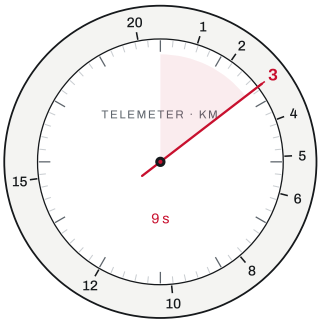

Telemeter

Measures the distance of an event you both see and hear, using the gap between light and sound.

1. A **Start** · as soon as you see the lightning or flash
2. A **Stop** · when you hear the sound
3. **Read the distance** · on the scale, opposite the seconds hand

During a storm, the thunder comes 9 seconds after the lightning: the storm is about **3 km** away.