
Brellum Steel Bracelet Ref BO.02 Assembly on watch case

November 2019 https://www.brellum.swiss/en/services/users-manuals.htm

1. List of material

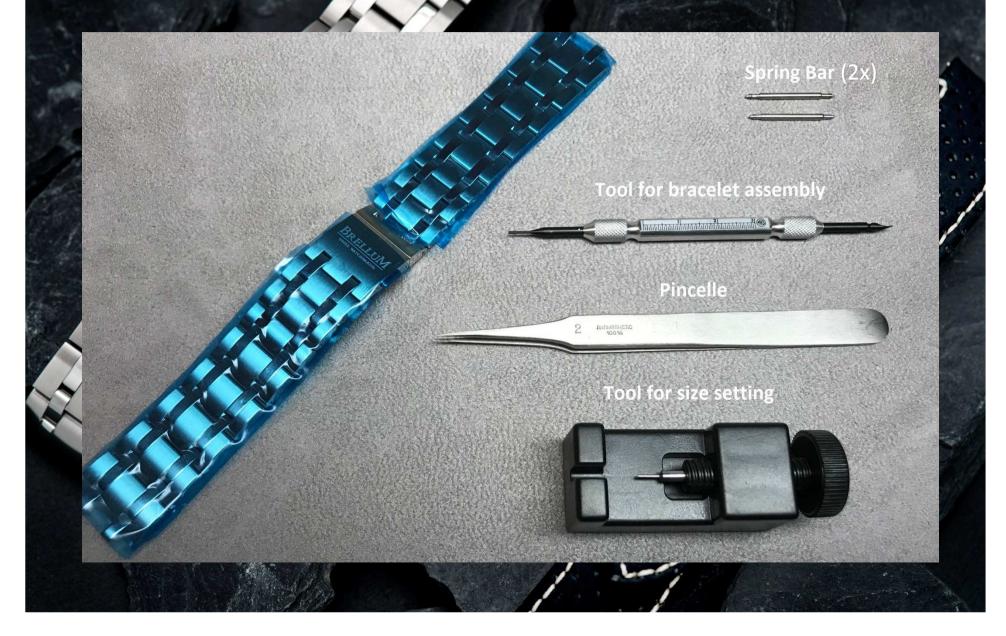

2. Before assembly

- Make sure you have good light
- Keep all labels on the bracelet during the assembly process
- Protect your workplace with a soft material
- Keep calm 😊
- If you can't do it, go through a watchmaker who will do it in just a few minutes.

3. Preparation

Introduce the spring bar into the end-piece Reading the name Brellum in that sens, you must put the endpiece at the 6H side of the watch

BRELLUM

120

4a. Assembly




- 1. Hold the watch firmly in your hand
- 2. Present the bracelet on the horns



3. Press with your tumb to hold the bracelet in position while assembling

4b. Assembly

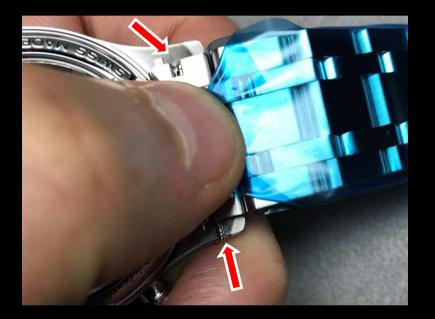

4. Using the mounting tool, while holding the bracelet in its position, gently press the head of the spring bars to place them in to horns, one side after the other



5. Once the two bars are in position, press the end piece slightly while holding it close to the case, until it clicks, which means that the spring bar is in position

5. Checking





6. If the end piece is correctly assembled, the bracelet fit perfectly the case

7. Proceed the other side of the watch following the same process

8. If you have this space between case and bracelet, you have put into the holes for leather strap, in this case, please restart the process